


Black Diamond Fixed Mount Projection Screen



Please note the following Parts

1. 4 Frame Components
2. 4 Corner Brackets
3. 2 Wall Brackets
4. Horizontal and Vertical Snaps
5. Latex Gloves
6. Screen Material
7. Hardware

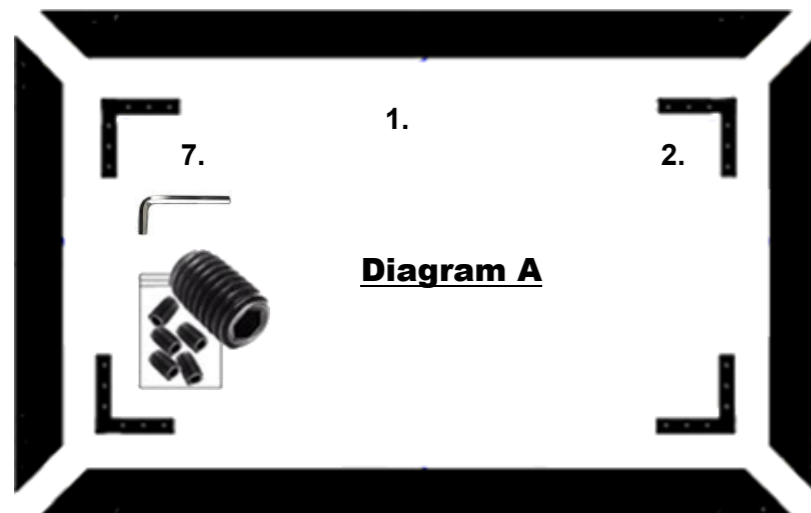

Getting Started

1. In a clean, open area place the flat sides of the frame face down on the floor. (for wood framed units, place the foam padding underneath the frame components to protect the frame finish).
2. Place the remaining parts beside the frame as shown in diagram A.

FIXED SNAP - Installation Instructions

Frame Assembly

1. Insert the Snaps into the frames components before installing the corner brackets. Divide the "Vertical" & "Horizontal" snaps in half and insert into each frame.
2. Insert 2 corner brackets into the vertical frame component in diagram C, step 1.
3. Push the 2 horizontal frame components onto the vertical frame, inserting the corner brackets into the horizontal frame in diagram B, steps 2 and 3.
4. Insert 2 corner brackets into the remaining vertical frame component in diagram B, step 4.
5. Push the remaining vertical frame into the 2 horizontal frame components, inserting the corner brackets in diagram B, step 5.

Screen Material Attachment

6. Put on latex gloves to protect screen material.
7. Unroll the screen material, with the Front Projection Side sticker face down on the frame, overlapping the back of the frame on all sides.
8. Center the material over the frame.
9. Start snapping from the center out as seen in diagram D.
10. Once complete the snaps can be adjusted to ensure the material is flat.

Wall Mount

11. Using the supplied drywall screws, attach the horizontal wall mounting brackets to structural wall studs as shown in Diagram E. NOTE: for CURVE screens, use the CURVE bracket.
12. Place the screen on top of the horizontal wall mounting bracket so the lip on the frame slips into the mounting track.
13. You may now slide the screen left or right to

Installation Help Line (512) 832-6939

www.siscreens.com

